


IP32 EXPLODED VIEW & PART NUMBERS

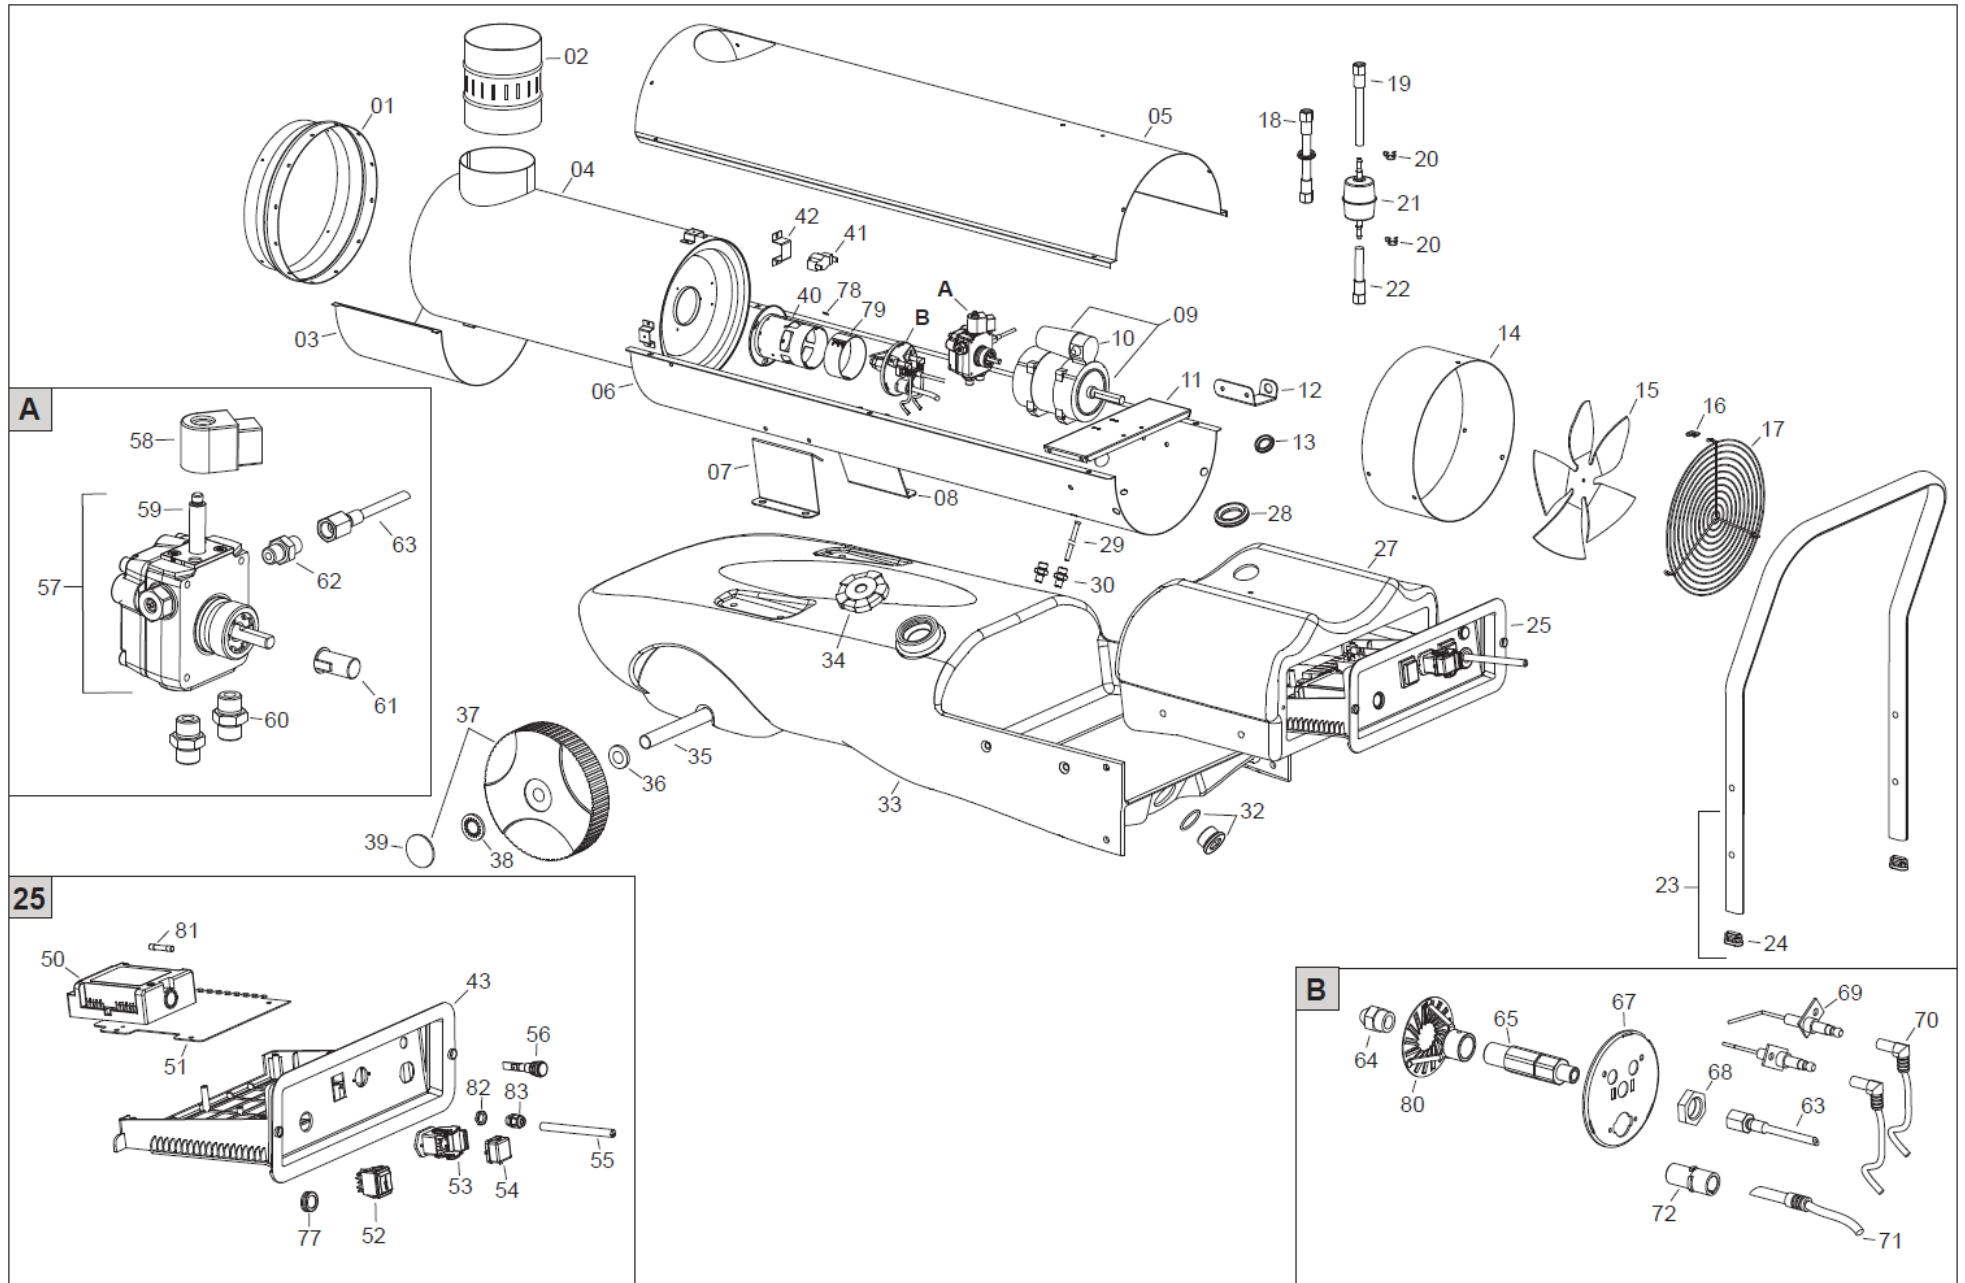

PL 01/18		From S/N
		20721001
POS	PART NUMBER	DESCRIPTION
1	BDG060759010	Outlet cone
2	BDG06548	Chimney fitting
3	BDG06079	Insulating panel
4	BDG06301	Combustion chamber
5	BDG063009010	Upper body
6	BDG062719010	Lower body
7	BDG060659005	Chassis support bracket
8	BDG060889005	Chassis support bracket
9	BDE10692	Motor
10	BDE11246	Capacitor
11	BDG06217	Motor support bracket
12	BDG060689005	Power cord support
13	BDC30352	Cable protection
14	BDG060709010	Air conveyor
15	BDT10207	Fan
16	BDM20412	Lock plate
17	BDP30165	Inlet grill
18	BDI40328	Flex diesel pipe
19	BDI40327	Flex diesel pipe
20	BDC30729	Clip
21	BDI30414	Filter
22	BDI40326	Flex diesel pipe
23	BDP201739005	Handle
24	BDC30361	Pipe cap
25	BDG00309	El. control box
27	BDP50129	Control box cover
28	BDC30372	Cable protection
29	BDI30696	Suction pipe
30	BDI30737	Brass fitting
32	BDC30380	Drain cap
33	BDP50130	Fuel tank

34	BDC30356	Tank cap
35	BDP201799005	Wheel axle
36	BDM20110	Washer
37	BDC10543	Red Wheel
38	BDM20203	Elastic washer
39	BDC10513R	Red wheel cover
40	BDG06181	Blast tube
41	BDE50109	Safety thermostat
42	BDG06221	Thermostat support bracket
43	BDG06153	El. control box panel
50	BDE40151	Flame control box
51	BDG06184	Support plate
52	BDE10102P	Switch
53	BDE20640	Thermostat plug
54	BDE20665	Thermostat plug cover
55	BDE30494	Power cord
56	BDE11030	Lamp
57	BDT20456	Diesel pump
58	BDT20458	Solenoid coil
59	BDT20461	Solenoid valve body
60	BDI20104	Iron fitting
61	BDE10698	Motor-pump coupling
62	BDI20115	Iron fitting
63	BDI40192	Micropipe
64	BDT20361	Nozzle
65	BDI33007	Nozzle support
67	BDG06228	Burner support disc
68	BDI31034	Brass lock nut
69	BDE10248	Ignition electrode
70	BDG02078	H.T. Cable connect
71	BDE50331	Phototransistor
72	BDE5032720	Photoresistor support
77	BDE20418L	Stop button protection
78	BDE20671	Terminal board

79	BDG06183	Air adjustment shutter
80	BDG01077	Diffuser ring
81	BDE10303	Fuse
82	BDE20965	Cable fastener nut
83	BDE20964	Cable fastener